 




# Black and Decker PS1800 Switch Replacement

This guide will show how to replace the Switch of Black and Decker PS1800.

Written By: Hamza Nawaz

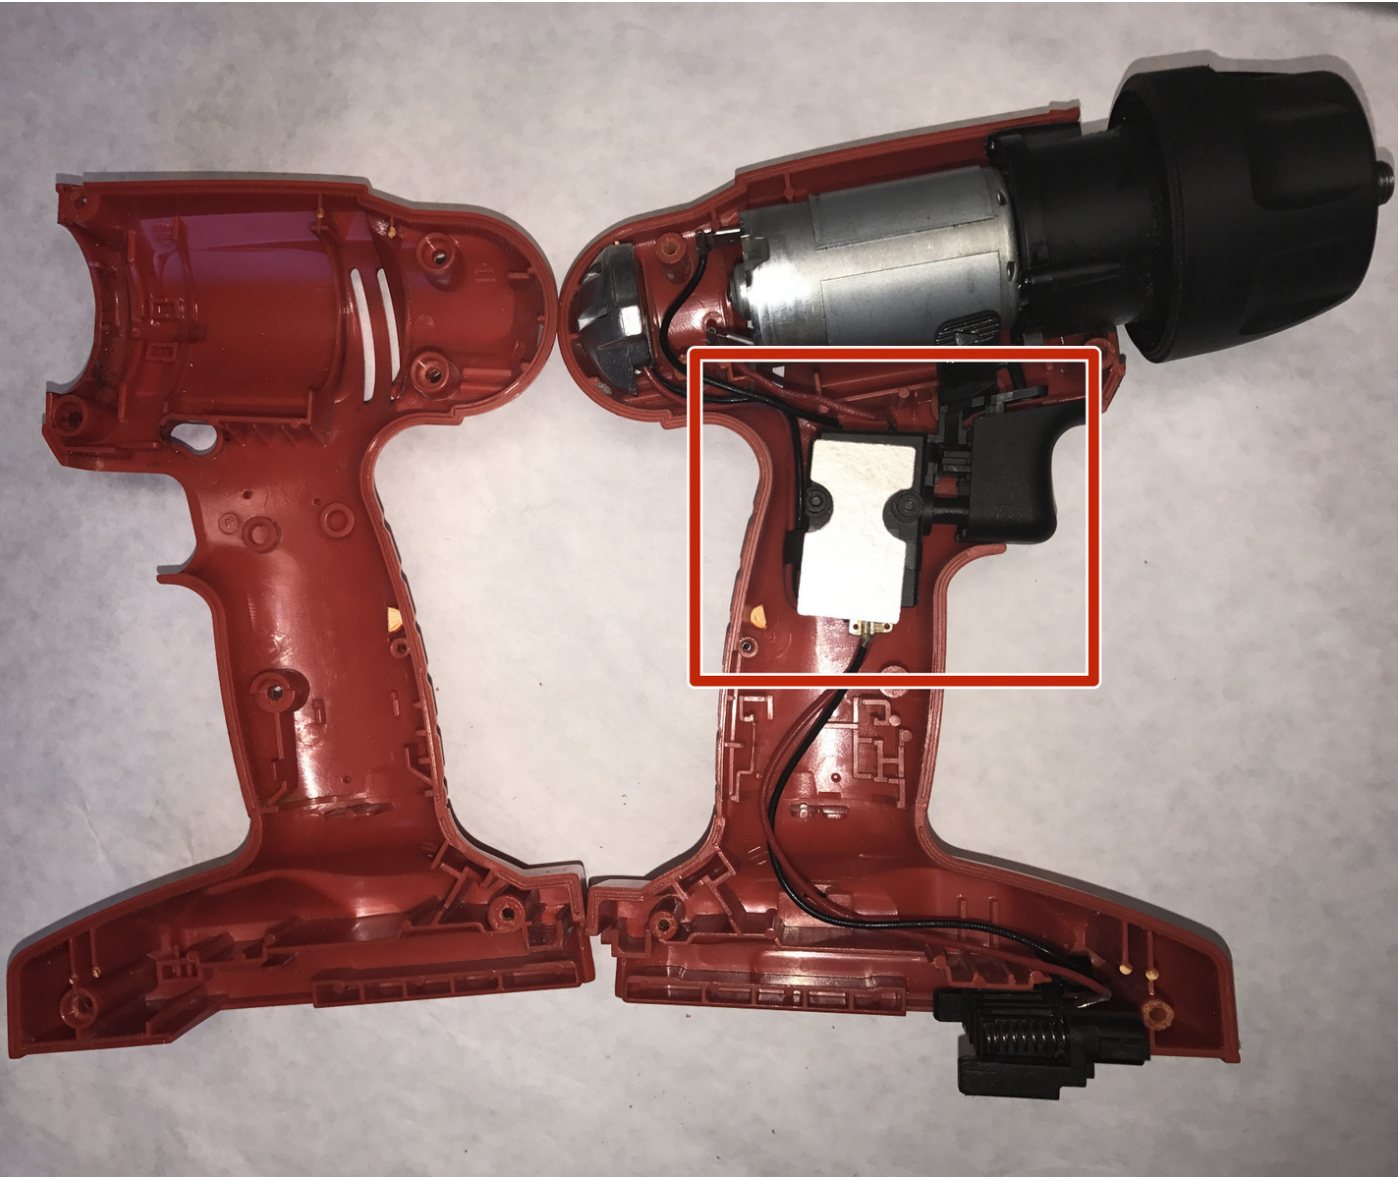

## INTRODUCTION

This guide will show how to replace the Switch of Black and Decker PS1800.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Case



- Flip device over so that the screw holes face up.
- Use the Phillips #00 screwdriver to remove all six 18mm Phillips screws.
- Use the Phillips #00 screwdriver to remove the single 12mm Philips screw.

 
 
## Step 2



- Remove one side of the Clamshell.



## Step 3 — Switch

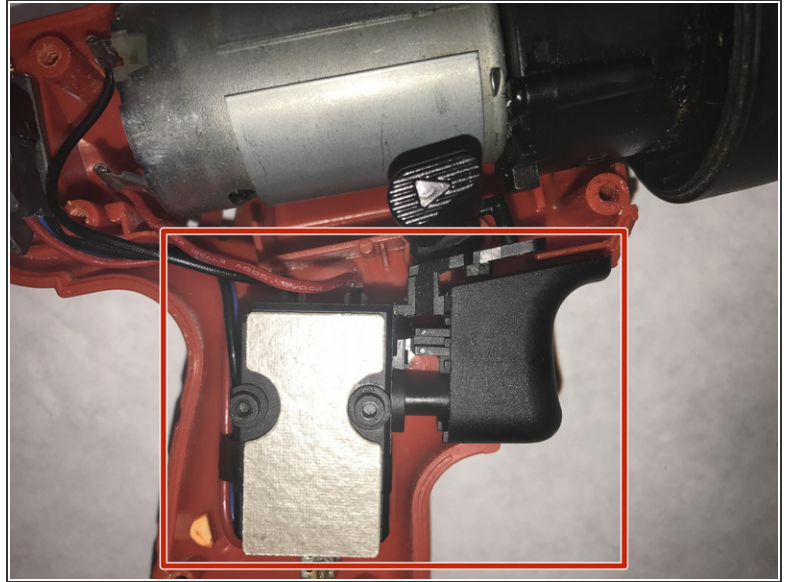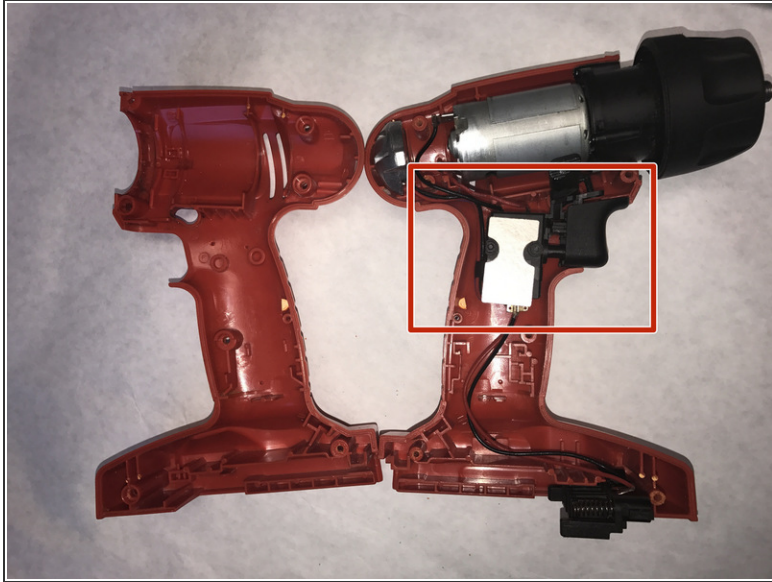

- Remove all the screws securing the drill case to open.
- The switch is highlighted in the middle of the drill.

## Step 4



- Pull out the switch.

## Step 5



- Solder off all the joints.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-25 06:51:47 PM.